 


PACKING LIST

- | | |
|-----------------------|-----------|
| 1. Subwoofer | : 1 unit |
| 2. Satellite Speakers | : 5 units |
| 3. Audio Cables | : 3 units |
| 4. User Manual | : 1 unit |
| 5. Remote Control | : 1 unit |
| 6. FM Antenna | : 1 pc |

DESCRIPTION OF THE SUBWOOFER CONTROL PANEL

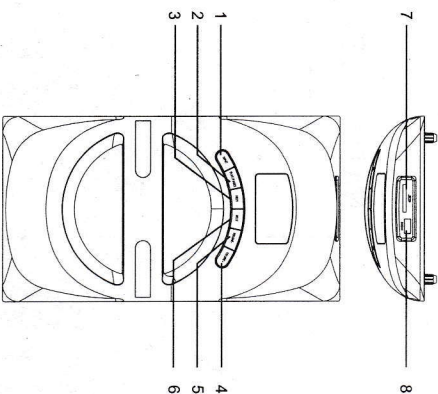

1. INPUT
2. Play/pause
3. Previous
4. VOLUME+ adjustment
5. VOLUME- adjustment
6. Next
7. SD/MMC input
8. USB input

AC POWER

IMPORTANT NOTES

 
- Make sure the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from power socket.
- Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to the unit.
- A damaged power cord can easily cause an electric shock or fire hazard. Never use a power cord after it has been damaged.

BATTERY INSTALLATION


- 1) Open the battery case.
- 2) Insert two batteries without the polarity reversed.
- 3) Close the battery case.
- 4) Keep within 5 meter range, 30 degree angle while aiming at the unit.

Precautionary note:

Remove the battery when the unit is not being used for a long period of time.

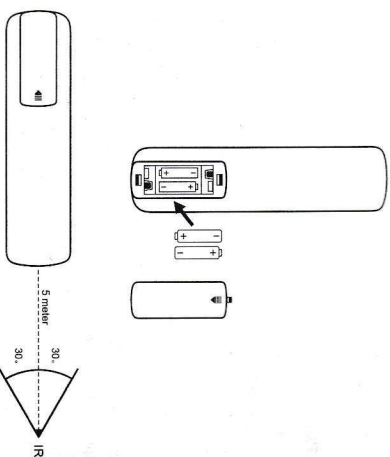

DESCRIPTION OF THE REMOTE CONTROL

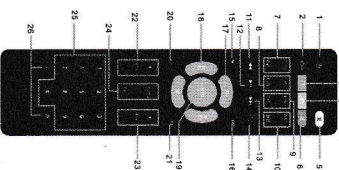 

1. STANDBY: press this button to turn on/off subwoofer
2. USB: USB audio input play
3. SD/MMC: SD/MMC audio input play
4. FM: FM radio input play
5. MUTE: To mute the sound
6. Bluetooth: This button only functions when your speaker system has Bluetooth function
7. CENTER +/-: Increase or Reduce the Center Volume
8. FRONT +/-: Increase or Reduce the Front Volume
9. REAR +/-: Increase or Reduce the Rear Volume
10. BASS +/-: Increase or Reduce the Bass Volume
11. PREV: To select the previous track in USB/Memory card or to select previous channel in radio station.
12. PLAY/PAUSE: To play/pause in USB/Memory card. Long press "PLAY/PAUSE" for 3 seconds to search and save channels automatically in radio station. 20 channels can be saved up at most.
13. NEXT: To select the next track in USB/Memory card or to select next channel in radio station.
14. REPEAT: Repeat an audio track
15. M: Mode Switchover
16. PRO: Logic channel switch
17. VOLUME+/-: Increase or Reduce the Volume
18. BASS +/-: Increase or Reduce the Bass Volume
19. RESET: Recover to default the mode.
20. AUX IN: AUX Input
21. 5.1 CH: 5.1 Input